



**HAVE QUESTIONS OR
NEED ADDITIONAL SUPPORT?**

**support@mdttac.com
+1 (604) 393-0800**

HUNT BRAKE - TITANIUM

TOOLS REQUIRED


- Crescent or Adjustable Wrench (Medium or Large)
- Masking Tape (Optional)

INSTALLATION


1. Thread the self-timing nut (A) onto the muzzle brake (B) until finger tight.



2. Install the muzzle brake on the rifle, turning **clockwise** until it is right against the barrel's shoulder.

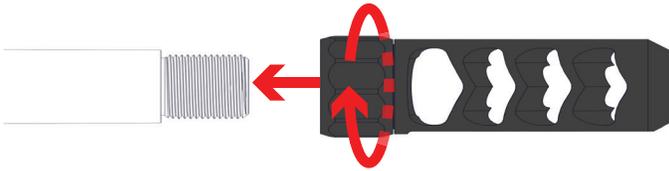

2. Rotate the muzzle brake **counterclockwise** until the MDT logo faces down.

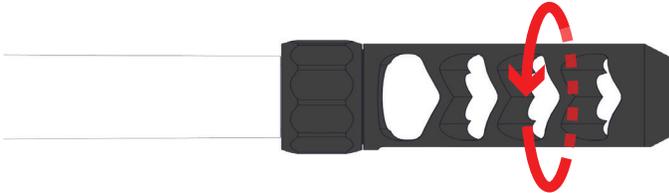

4. Use the adjustable wrench to snug down the timing nut, starting with the brake at the 11 o'clock position so that as you tighten, it aligns itself into place.

A. Note: To protect the finish, place masking tape over the nut before fully tightening it.

ADDITIONAL TIPS

Leveling:

Before tightening the nut, place a level (like the Send It GEN2) on the brake to ensure it's properly aligned.

Locking Compound:

If you would like to use a locking compound, such as Loctite, we recommend blue for easy removal. Reds can be used but may require heat to remove.

NOTES

Standard Brake:

For 30 Calibers & under

Magnum Brake:

For 338 Calibers & under



**WANT TO LEARN MORE?
CHECK OUT OUR INSTALL VIDEO**